


# COOKTOP PARTS

For Model: FEP210EW3, FEP210EN3, FEP210EQ3  
(White) (Almond) (Designer White)

20" ELECTRIC  
FREESTANDING RANGE  
STANDARD CLEAN OVEN

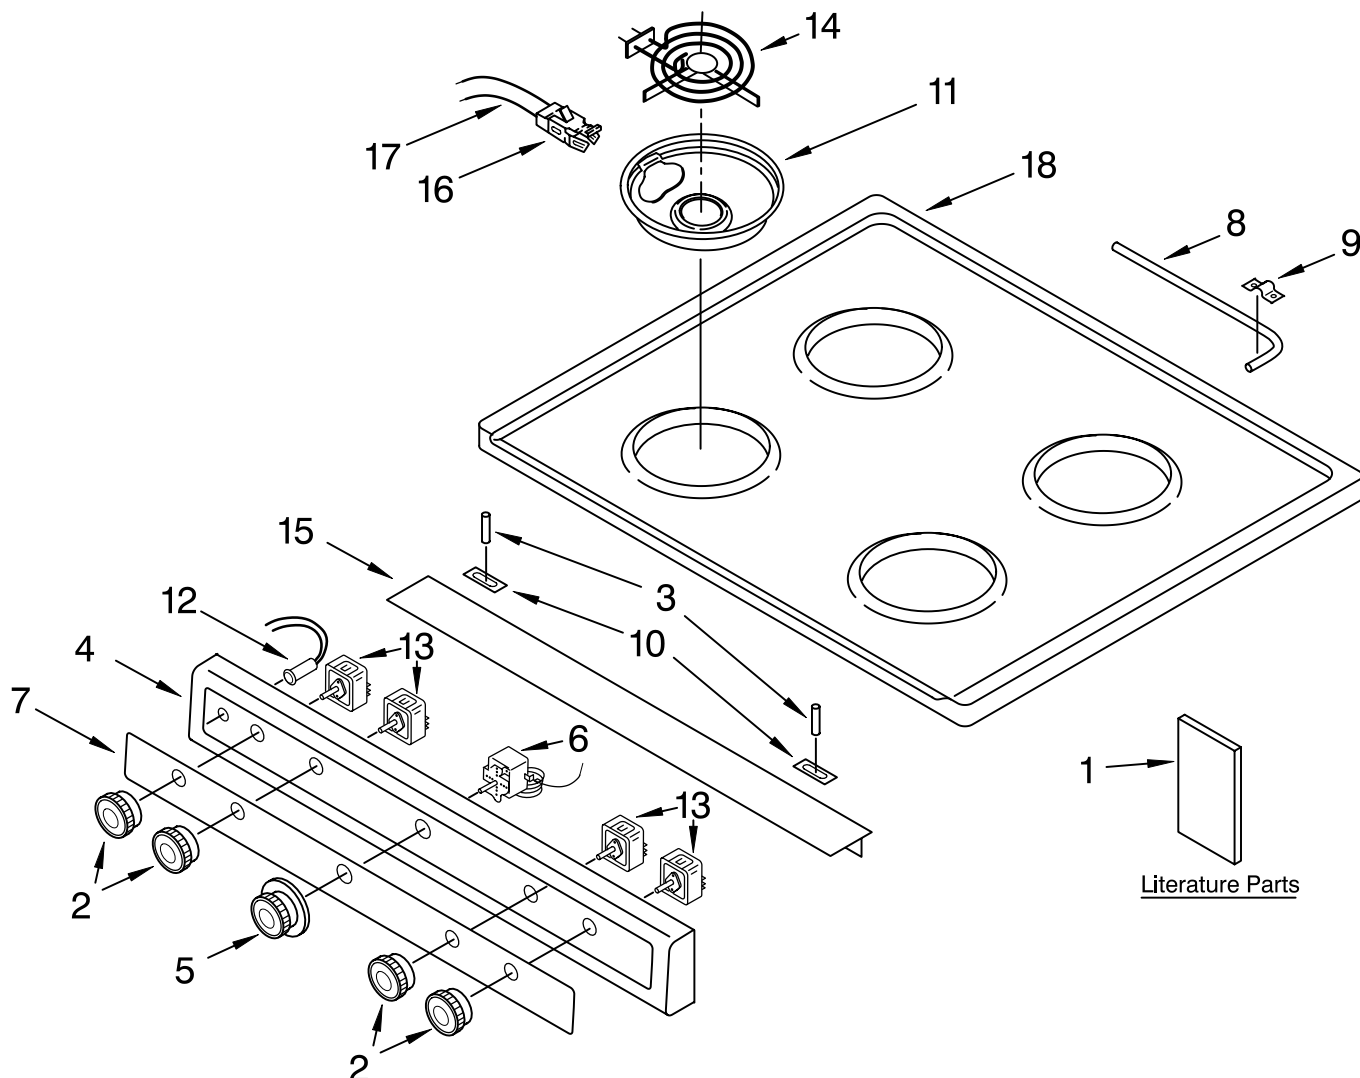

Literature Parts

Illus. No.	Part No.	DESCRIPTION
1	LIT4364040	Literature Use & Care Guide
	LIT4364408	Wiring Diagram
2	4364183	Knob, Burner (4) Black
	4364391	White
3	4364157	Strikepin, Cooktop (Includes Nut)
4	4364437	Panel, Manifold Black
	4364441	White (Includes #7)
5	4364184	Knob, Thermostat Black
	4364392	White


Illus. No.	Part No.	DESCRIPTION
6	4364181	Thermostat
	4364249	Screw, 6-32 x 3/8
7	4364436	Decal, Manifold Black
	4364440	White
8	4364217	Rod, Support
9	4364218	Clip, Rod Support
	4364151	Screw, 8-18 x 3/8
10	4364158	Catch, Strikepin
11	4364192	Bowl, Chrome 8"(1)
	4364193	6" (3)
12	4364182	Indicator, Surface
13	4364180	Switch, Infinite
	4364180	Use W/8" Element
	4364179	Use W/6" Element

Illus. No.	Part No.	DESCRIPTION
14	4364175	Element, Surface 8" (1)
	4364174	6" (3)
15	4364196	Cover, Switch
	4364151	Screw, 8-18 x 3/8
16	4364178	Receptacle, Elmnt (Includes Wires)
	4364177	Brkt, Receptacle
	4364043	Screw, 6-32 x 1/4
17	4364188	Wire, Element Red (Left Front)
	4364189	Yellow (Rt. Front)
	4364190	Blue (Left Rear)
	4364191	Black (Rt. Rear)
18	4364194	Cooktop White
	4364195	Almond

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN DOOR PARTS

For Model: FEP210EW3, FEP210EN3, FEP210EQ3  
(White) (Almond) (Designer White)

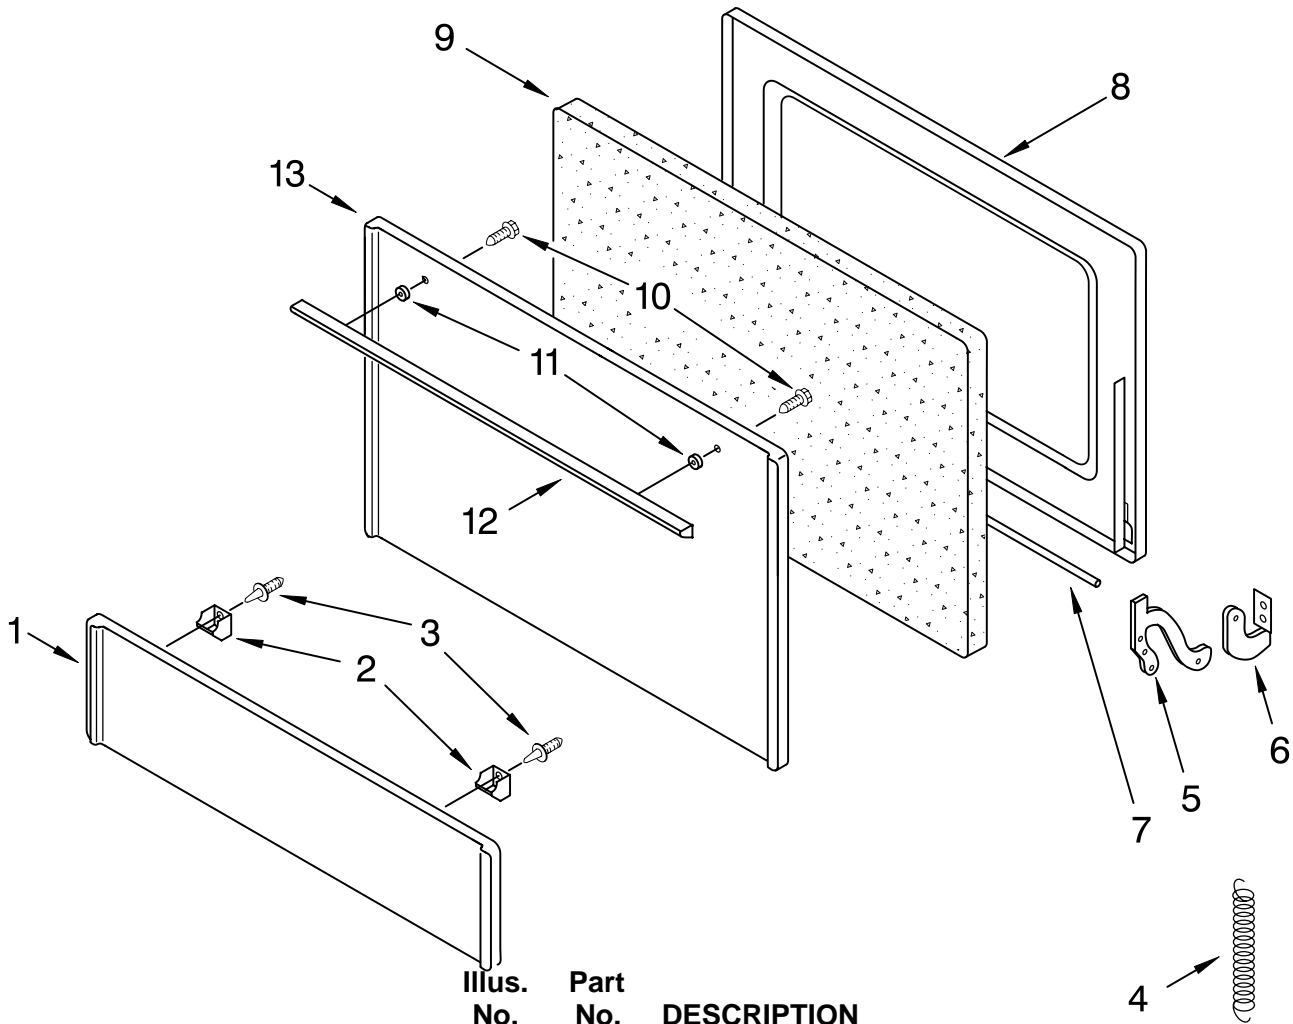


Illus. No.	Part No.	DESCRIPTION
1	4364381 White 4364240 Almond	Panel, Lower
2	4364241	Catch, Panel
3	4364242	Strikepin
4	4364234	Spring, Oven Door
5	4364235 Left Hand 4364236 Right Hand	Hinge, Oven Door
6	4364237 Left Hand 4364238 Right Hand	Bearing, Hinge
7	4364233	Rod, Oven Door
8	4364231	Liner, Oven Door
9	4364230	Insulation, Door
10	4364057	Screw, Door Handle
11	4364055	Spacer, Handle
12	4364394 White 4364232 Black	Handle, Ov. Door
13	4364382 White 4364229 Almond 4364254 Screw, 10AB x 1/2	Panel, Oven Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Model: FEP210EW3, FEP210EN3, FEP210EQ3  
(White) (Almond) (Designer White)

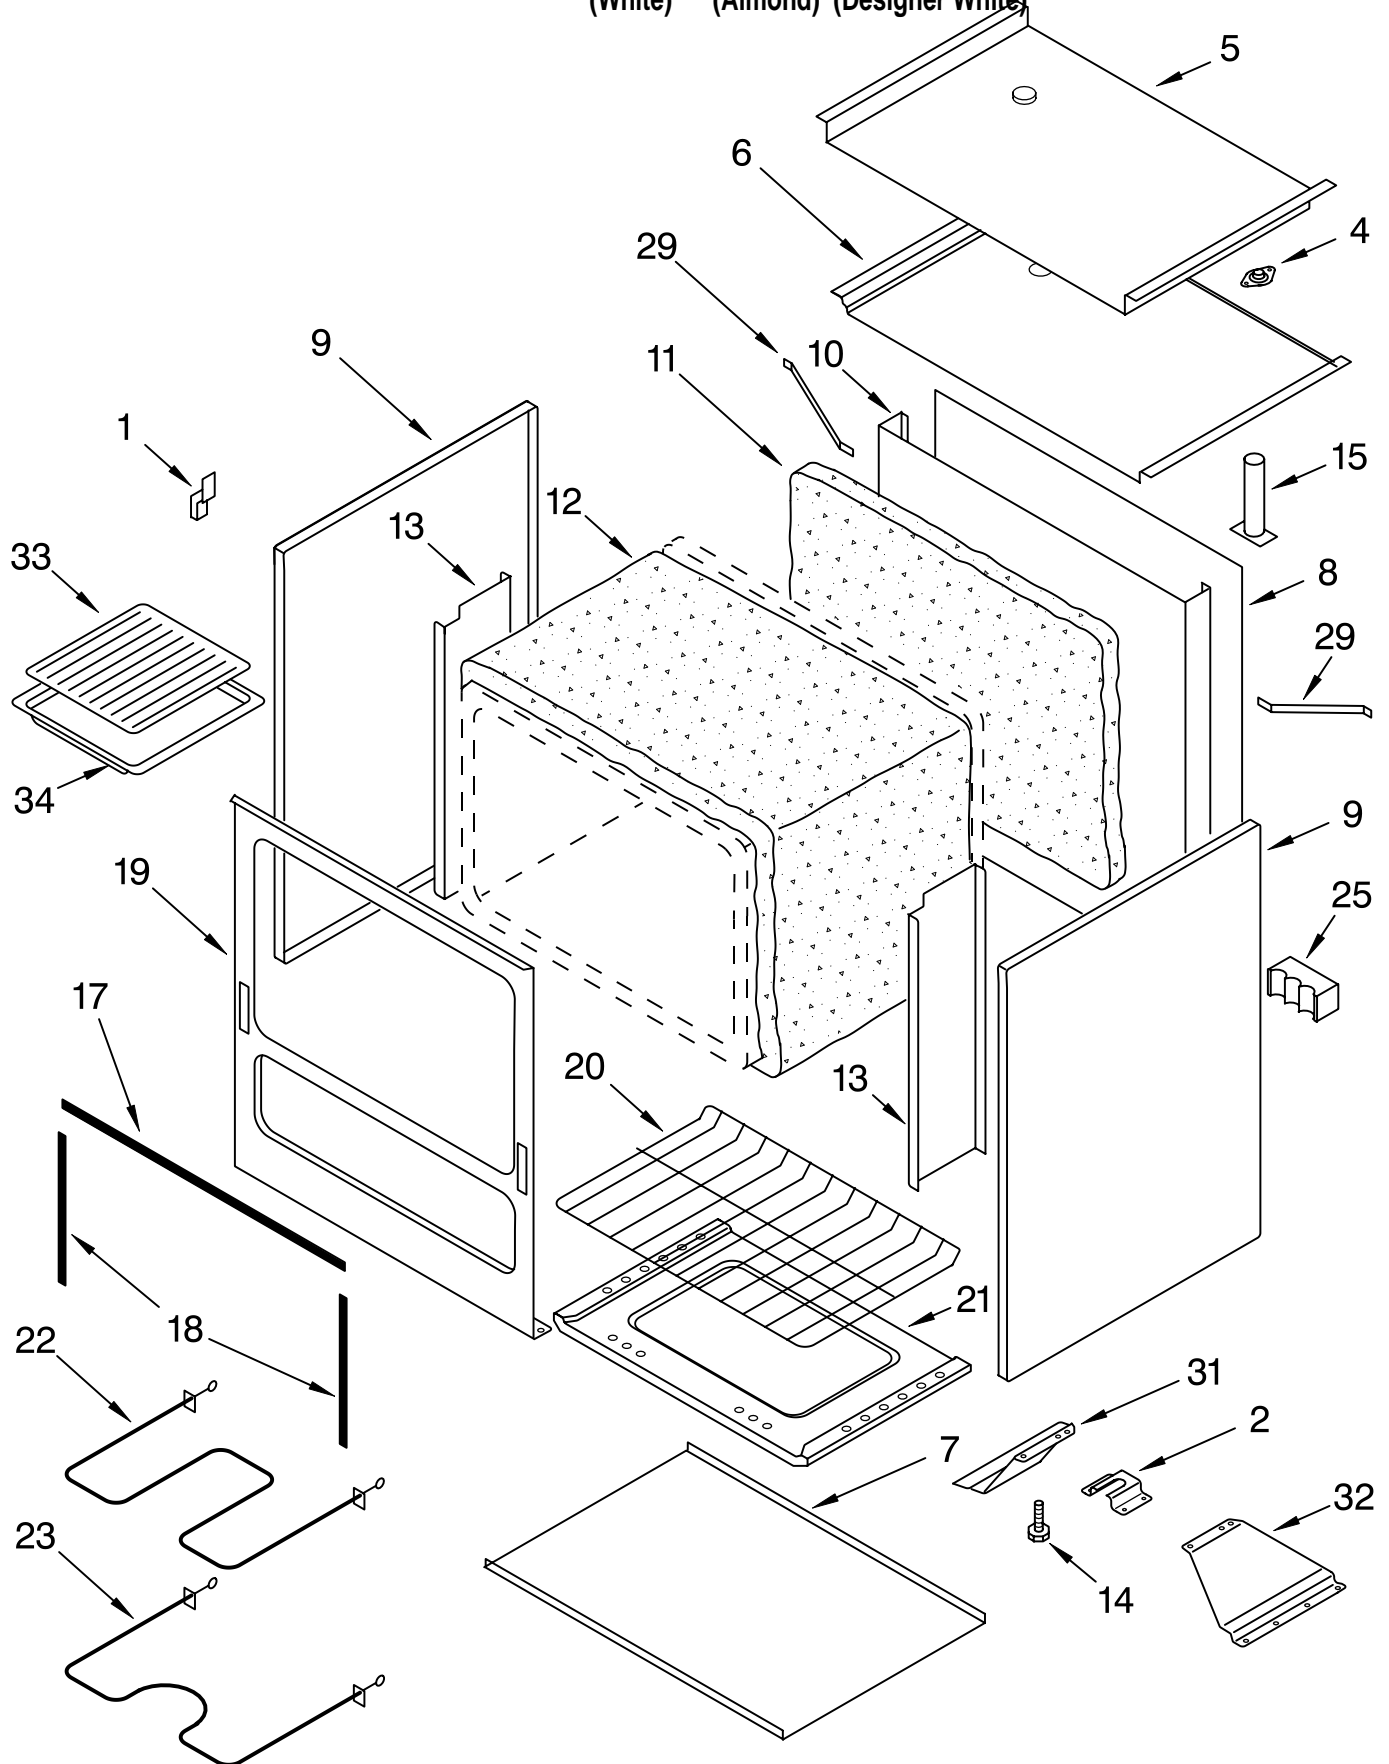

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS


For Model: FEP210EW3, FEP210EN3, FEP210EQ3  
(White) (Almond) (Designer White)

Illus. No.	Part No.	DESCRIPTION
1	4364130	Clip, Thermobulb
2	4364088	Anti-Tip Kit
4	4364176	Switch, Limit
	4364246	Screw, #8 x 1/2
5	4364197	Bottom, Upper Box
	4364151	Screw, 8-18 x 3/8
6	4364198	Bottom, Lower Box
	4364255	Screw, #10 x 1/2
7	4364199	Bottom, Main
	4364246	Screw, #8 x 1/2
	4364153	Screw, 10-12 x 1/2
8	4364200	Cover, Rear
	4364153	Screw, 10-12 x 1/2
9		Panel, Side
	4364201	White
	4364202	Almond
10	4364203	Back, Main
	4364153	Screw, 10-12 x 1/2
11	4364204	Insulation, Back
12	4364205	Insulation, Wrap
13	4364206	Baffle, Inner Side
14	4364080	Leg, Leveler
15	4364207	Vent, Oven Tube
17	4364084	Gasket, Oven Top
18	4364208	Gasket, Oven Side
19	4364209	Frame, Front
20	4364210	Rack, Oven
21	4364211	Bottom, Oven
22	4364185	Element, Broil
	4364151	Screw, 8-18 x 3/8
23	4364186	Element, Bake
	4364151	Screw, 8-18 x 3/8
25	4364187	Block, Terminal
	4364256	Screw, 8A x 1
	4364257	Hex Nut, 10-32
29	4364212	Brace, Back
	4364153	Screw, 10-12 x 1/2
31	4364214	Support, Rt. Rear
32	4364215	Support, Lt. Rear
33	4364065	Grill, Broiler
34	4364216	Pan, Broiler

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# BACKGUARD PARTS

For Model: FEP210EW3, FEP210EN3, FEP210EQ3  
(White) (Almond) (Designer White)

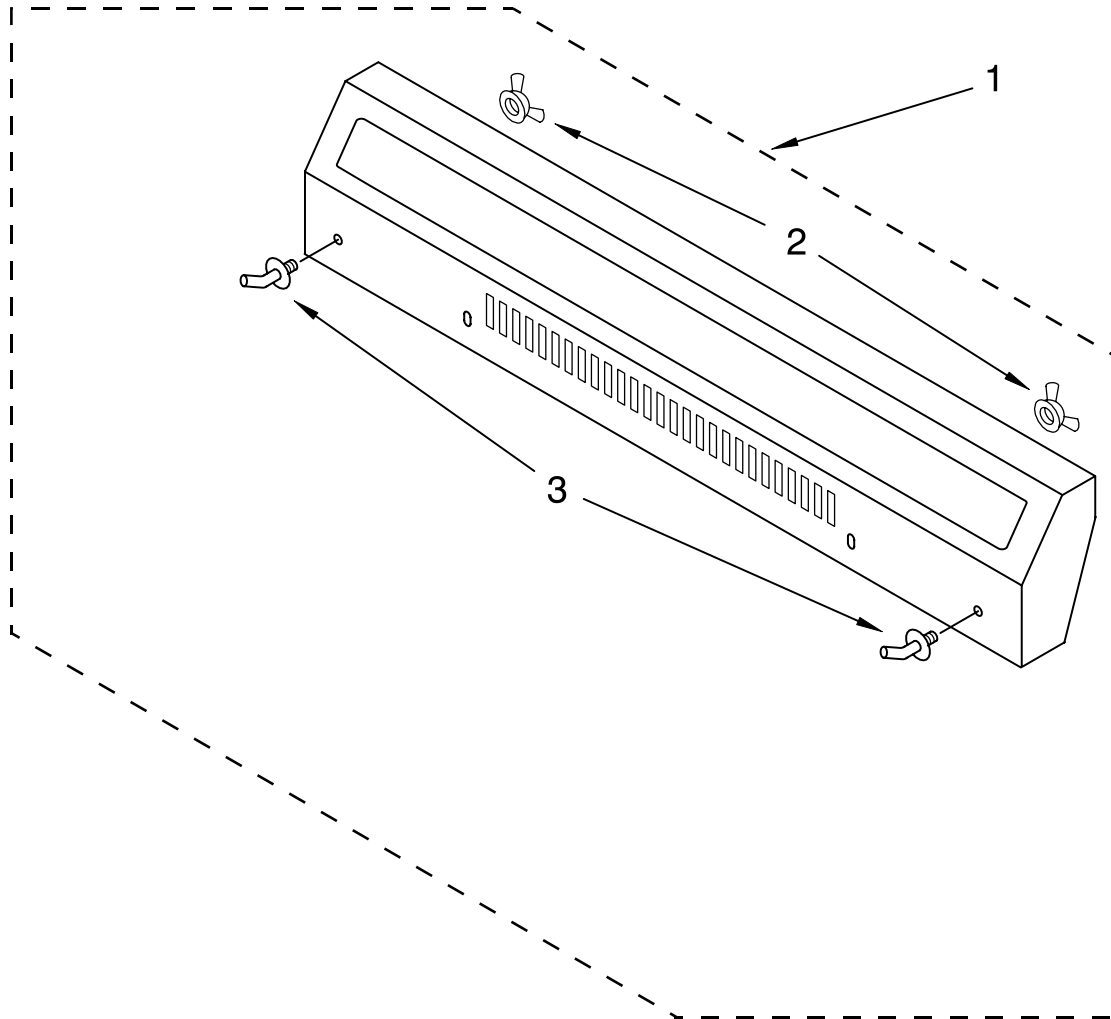

Illus. No.	Part No.	DESCRIPTION
1	4364434	Backguard White
	4364438	Almond
2	4364046	Wingnut, 10-24
3	4364102	Hinge Pin (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST